






ORG12004AY Vandleg - dobbelt kar

Date: 2022.11.10 Subject: View1
Rev: 2022.11.10 Drawing no.: MNT12003
Page nr.: 1/4 Scale: None
Paper: A4 Drawing by: Jan Routh Sørensen


Mounting

Copyright Elverdal A/S.

Elverdal

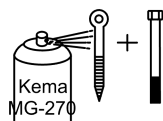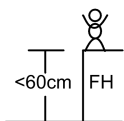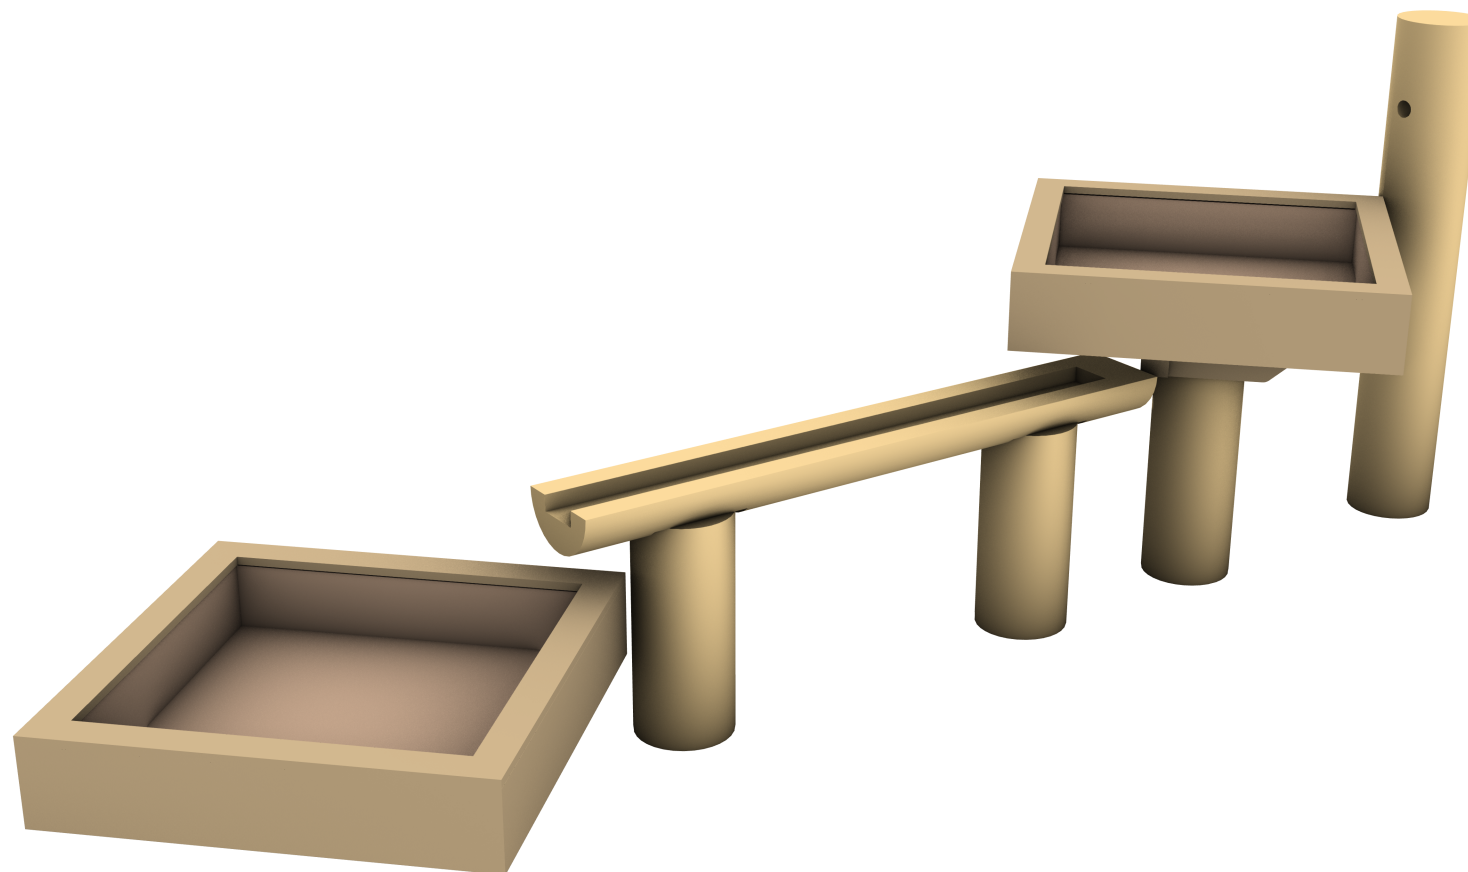

EN 1176

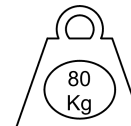






INFO

VIGTIGT: Hele anlægget skal samles før der støbes beton
IMPORTANT: The entire facility must be assembled before mould in concrete
WICHTIG: Die Anlage muß komplett montiert sein, bevor das Fundament
betoniert wird


Mounting

Copyright Elverdal A/S.

Elverdai

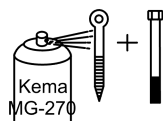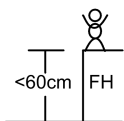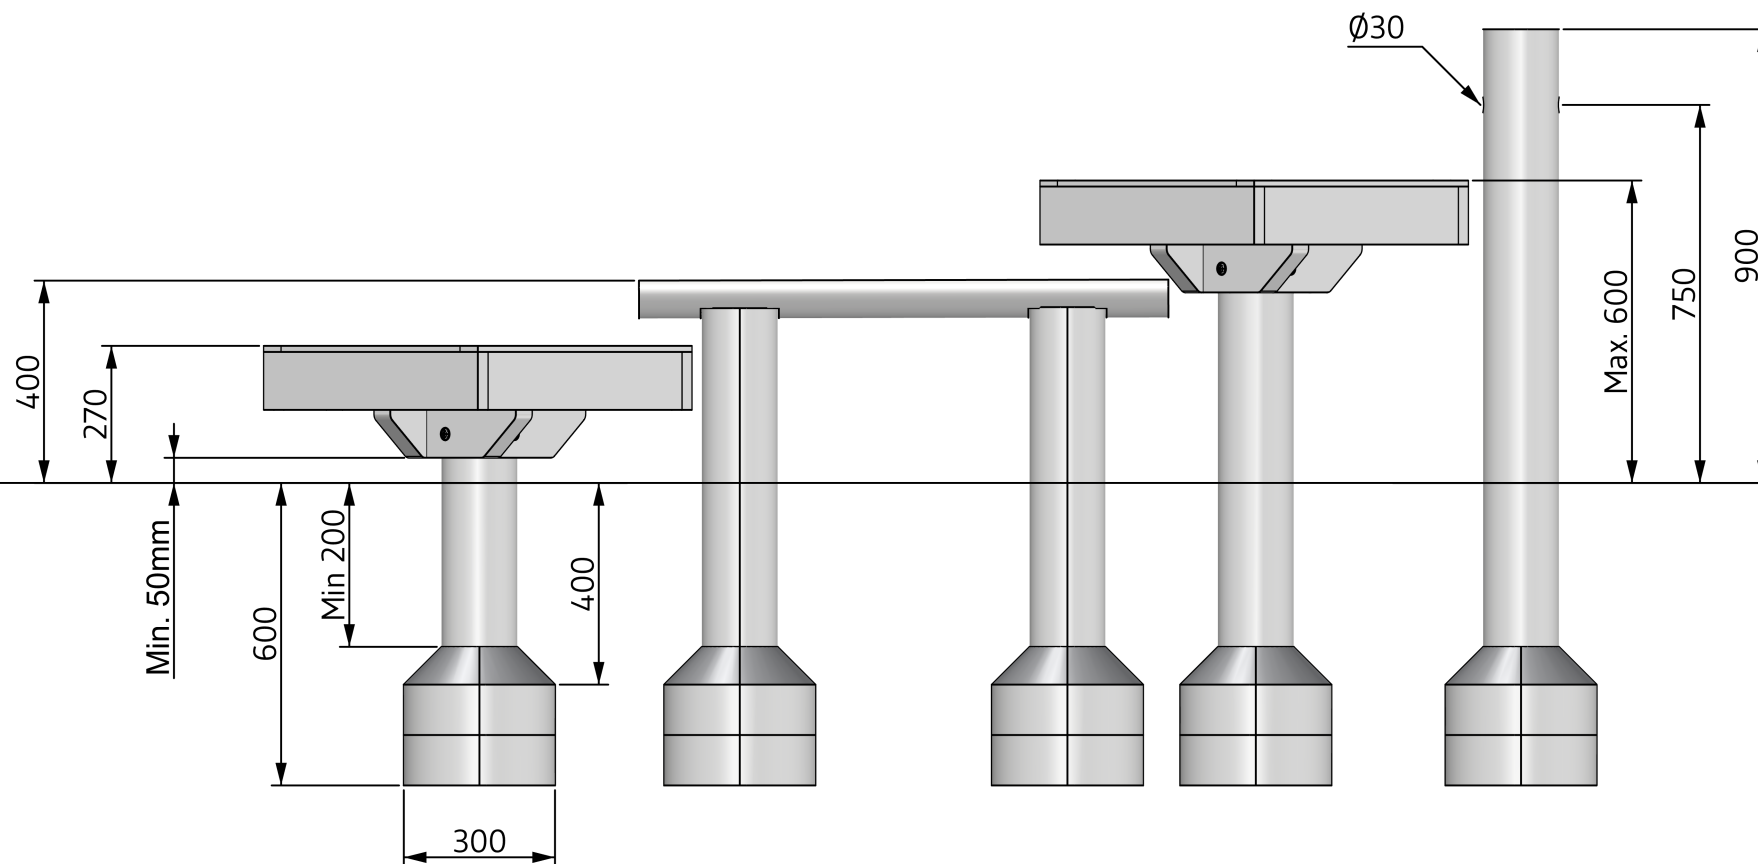

EN 1176

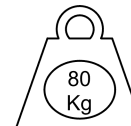






INFO

VIGTIGT: Hele anlægget skal samles før der støbes beton
 IMPORTANT: The entire facility must be assembled before mould in concrete
 WICHTIG: Die Anlage muß komplett montiert sein, bevor das Fundament
 betoniert wird


Mounting

Copyright Elverdal A/S.

Elverdal

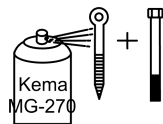

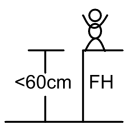
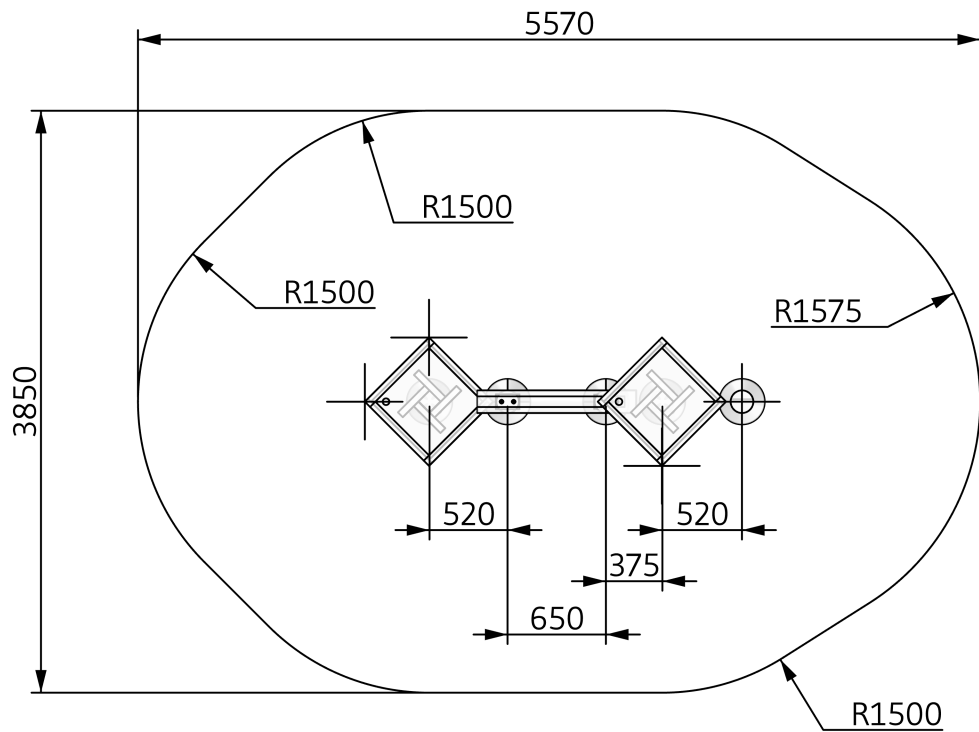


EN 1176

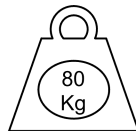


INFO

VIGTIGT: Hele anlægget skal samles før der støbes beton
IMPORTANT: The entire facility must be assembled before mould in concrete
WICHTIG: Die Anlage muß komplett montiert sein, bevor das Fundament
betoniert wird

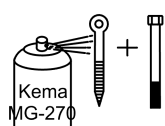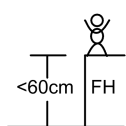

EN 1176

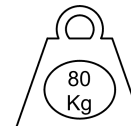

VIGTIGT: Hele anlægget skal samles før der støbes beton
 IMPORTANT: The entire facility must be assembled before mould in concrete
 WICHTIG: Die Anlage muß komplett montiert sein, bevor das Fundament
 betoniert wird